

AFA 1000 – AIR FLOW MONITOR

CALABRATION :

PRESS ENTER AND HOLD DOWN
PRESS + OR – TO SET UP
SELECT CALIBRATION – PRESS ENTER
0000
PASSWORD – PRESS ENTER 4 TIMES

SET SASH AT 10” AND TAKE READING WITH ANAMOMETER
PRESS ENTER AND SET MONITOR TO THAT READING USING + OR –
SET SASH AT 5” AND TAKE READING WITH ANAMOMETER
PRESS ENTER AND SET MONITOR TO THAT READING USING + OR –
SCROLL TO DONE AND PRESS ENTER
SCROLL TO “RUN” AND PRESS ENTER
TEST SASH IN BOTH POSITIONS TO INSURE MONITOR CALIBRATION.

LOW LEVEL ALARMS:

PRESS ENTER AND HOLD DOWN
PRESS + OR – TO SET UP
SELECT CONFIGURE – PRESS ENTER
0000
PASSWORD – PRESS ENTER 4 TIMES
SELECT CAL CONFIGURE – PRESS ENTER

SCROLL TO “WARNING AIR ALARM” - ENTER
+ OR – TO SET POINT - (I.E. 75)
MUST BE ABOVE LOW AIR ALARM SET POINT
PRESS ENTER

SCROLL TO “WARNING “LOW AIR ALARM” - ENTER
+ OR – TO SET POINT - (I.E. 70)
PRESS ENTER

SCROLL TO “DONE” - ENTER
SCROLL TO RUN - ENTER

ALARM:
IF ALARM SOUNDS, PRESS ENTER TO TEMPORARILY SILENCE.
ALARM WILL RESET AUTOMATICALLY WHEN OPERATING
CONDITIONS ARE MET.

FPM DISPLAY:

PRESS ENTER AND HOLD DOWN
PRESS + OR - TO SET UP
SELECT CONFIGURE - PRESS ENTER
0000
PASSWORD - PRESS ENTER 4 TIMES
SELECT CAL CONFIGURE - PRESS ENTER
SCROLL TO "SHOW AIR FLOW"
OFF = BAR CHART (PREFERED)
ON = DIGITAL FPM
PRESS ENTER
SCROLL TO "DONE" - ENTER
SCROLL TO RUN - ENTER